

CHANNEL VISION  
Limited Warranty

Channel Vision Technology will repair or replace any defect in material or workmanship which occurs during normal use of this product with new or rebuilt parts, free of charge in the USA, for two years from the date of original purchase. This is a no hassle warranty with no mail in warranty card needed. This warranty does not cover damages in shipment, failures caused by other products not supplied by Channel Vision Technology, or failures due to accident, misuse, abuse, or alteration of the equipment. This warranty is extended only to the original purchaser, and a purchase receipt, invoice, or other proof of original purchase date will be required before warranty repairs are provided.



Mail in service can be obtained during the warranty period by calling (800) 840-0288 toll free. A Return Authorization number must be obtained in advance and can be marked on the outside of the shipping carton.

This warranty gives you specific legal rights and you may have other rights (which vary from state to state). If a problem with this product develops during or after the warranty period, please contact Channel Vision Technology, your dealer or any factory-authorized service center.

500-052

# TE110DS


## Door strike relay for the TE110

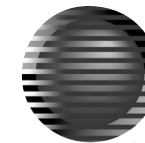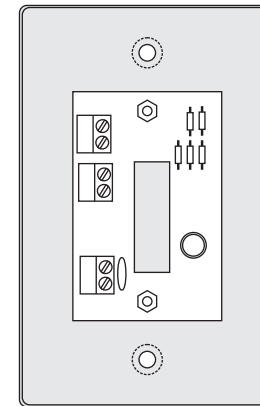


CHANNEL VISION™

234 Fischer Avenue · Costa Mesa, CA 92626  
(714) 424-6500 · (800) 840-0288 · (714) 424-6510 fax  
www.channelvision.com · email: sales @ channelvision.com


The TE110DS is a relay contact that can be activated by the TE110 when the homeowner dials the appropriate touch tone code from any of the house telephones. See diagram for details.

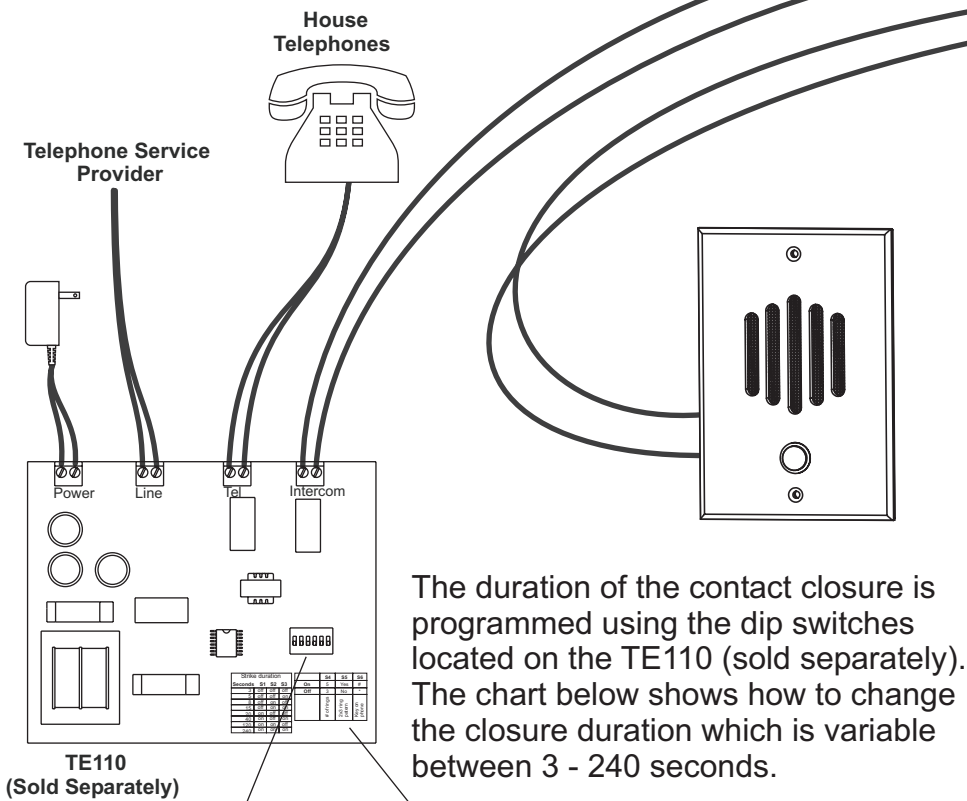

The duration of the contact closure is programmed using the dip switches located on the TE110 (sold separately). The chart below shows how to change the closure duration which is variable between 3 - 240 seconds.

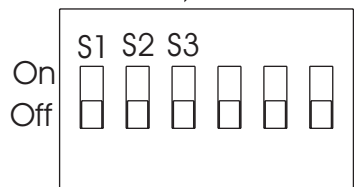

Strike duration			
Seconds	S1	S2	S3
3	off	off	off
5	off	off	on
8	off	on	off
15	off	on	on
20	on	off	off
40	on	off	on
120	on	on	off
240	on	on	on

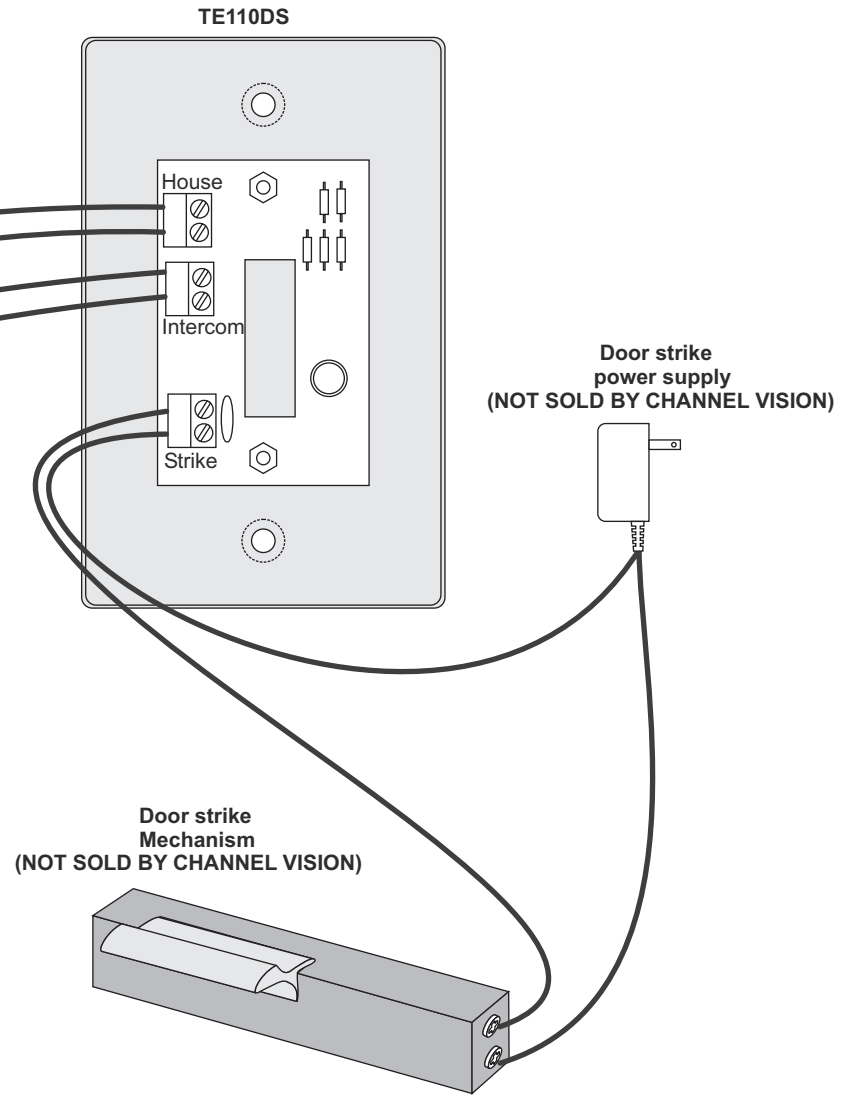

### Basic Operation:

- To close the door strike relay while you are already communicating with the door speaker, press #7 (or \*7).
- To close the door strike relay when you are not communicating with the door speaker, press ## (or \*\*) and then press #7 (or \*7).