



- Remove the dome cover by rotating it counter clockwise.
- Drill a hole in the wall or ceiling for wiring (see diagram).
- If necessary, attach the camera's video output to a coax extension that is long enough to reach your monitor or video distribution equipment.
- If necessary, cut the connector off of the end of the power supply and splice in an extension using crimp-on connectors.
- Mount the base with the provided screws.
- Move the camera body to adjust the view and make electronic adjustments using the dip switches.
- Re-attach the dome cover by rotating it in a clockwise direction. Secure it in place with the small set screw provided.