


A0125 (Rear View)

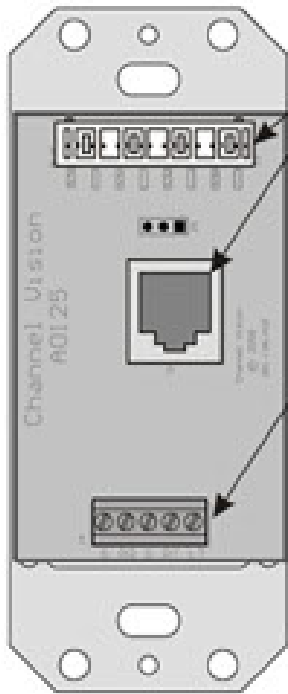

Input Connectors ... To simplify installation, the A0125 has both 110 and RJ-45 inputs. Only one of the inputs should be used at a time.

Output Connector ... This 5 position screw terminal is used to connect line level audio out to the A0302 where it can be delivered to the A0240 for amplification. The Ground (G) and Power (PR) terminals can be used to accept power from the A0240 via the A0302. These terminals should only be used if the A0125 is not connected to one of Channel Vision's CAT5 audio hubs.

Connect the A0125 to one of Channel Vision's CAT5 Audio Hubs. The CAT5 Audio Hub will distribute line level audio and power to the A0125.

